

TV Channels and Frequencies

Just List of frequencies/Channels used by NTSC TV

Channel #	Freq. MHz	Channel #	Freq. MHz	Channel #	Freq. MHz
VHF Low Channels		29	560-566	59	740-746
1*	44-50**	30	566-572	60	746-752
2	54- 60	31	572-578	61	752-758
3	60-66	32	578-584	62	758-764
4	66-72	33	584-590	63	764-770
5	76-82	34	590-596	64	770-776
6	82-88	35	596-602	65	776-782
7	174-180	36	602-608	66	782-788
8	180-186	37	608-614	67	788-794
9	186-192	38	614-620	68	794-800
10	192-198	39	620-626	69	800-806
11	198-204	40	626-632	70	806-812
12	204-210	41	632-638	71	812-818
13	210-216	42	638-644	72	818-824
UHF Channels		43	644-650	73	824-830
14	470-476	44	650-656	74	830-836
15	476-482	45	656-662	75	836-842
16	482-488	46	662-668	76	842-848
17	488-494	47	668-674	77	848-854
18	494-500	48	674-678	78	854-860
19	500-506	49	680-686	79	860-866
20	506-512	50	686-692	80	866-872
21	512-518	51	692-698	81	872-878
22	518-524	52	698-704	82	878-884
23	524-530	53	704-710	83	884-890
24	530-536	54	710-716	*Channel #1 not used ** Video Carrier: Low Edge +1.25 MHz, Audio Carrier: Upper Edge - .25 MHz, i.e., Video Ch1 is 45.25 MHz, Audio Ch1 is 49.75 MHz	
25	536-542	55	716-722		
26	542-548	56	722-728		
27	548-554	57	728-734		
28	554-560	58	734-740		

Some channels may be offset 10 kHz to prevent mutual interferences

